

SONY

IPELA


HD Visual Communication System
PCS-XC1

4-545-842-11 (1)



Installation Guide

Connections

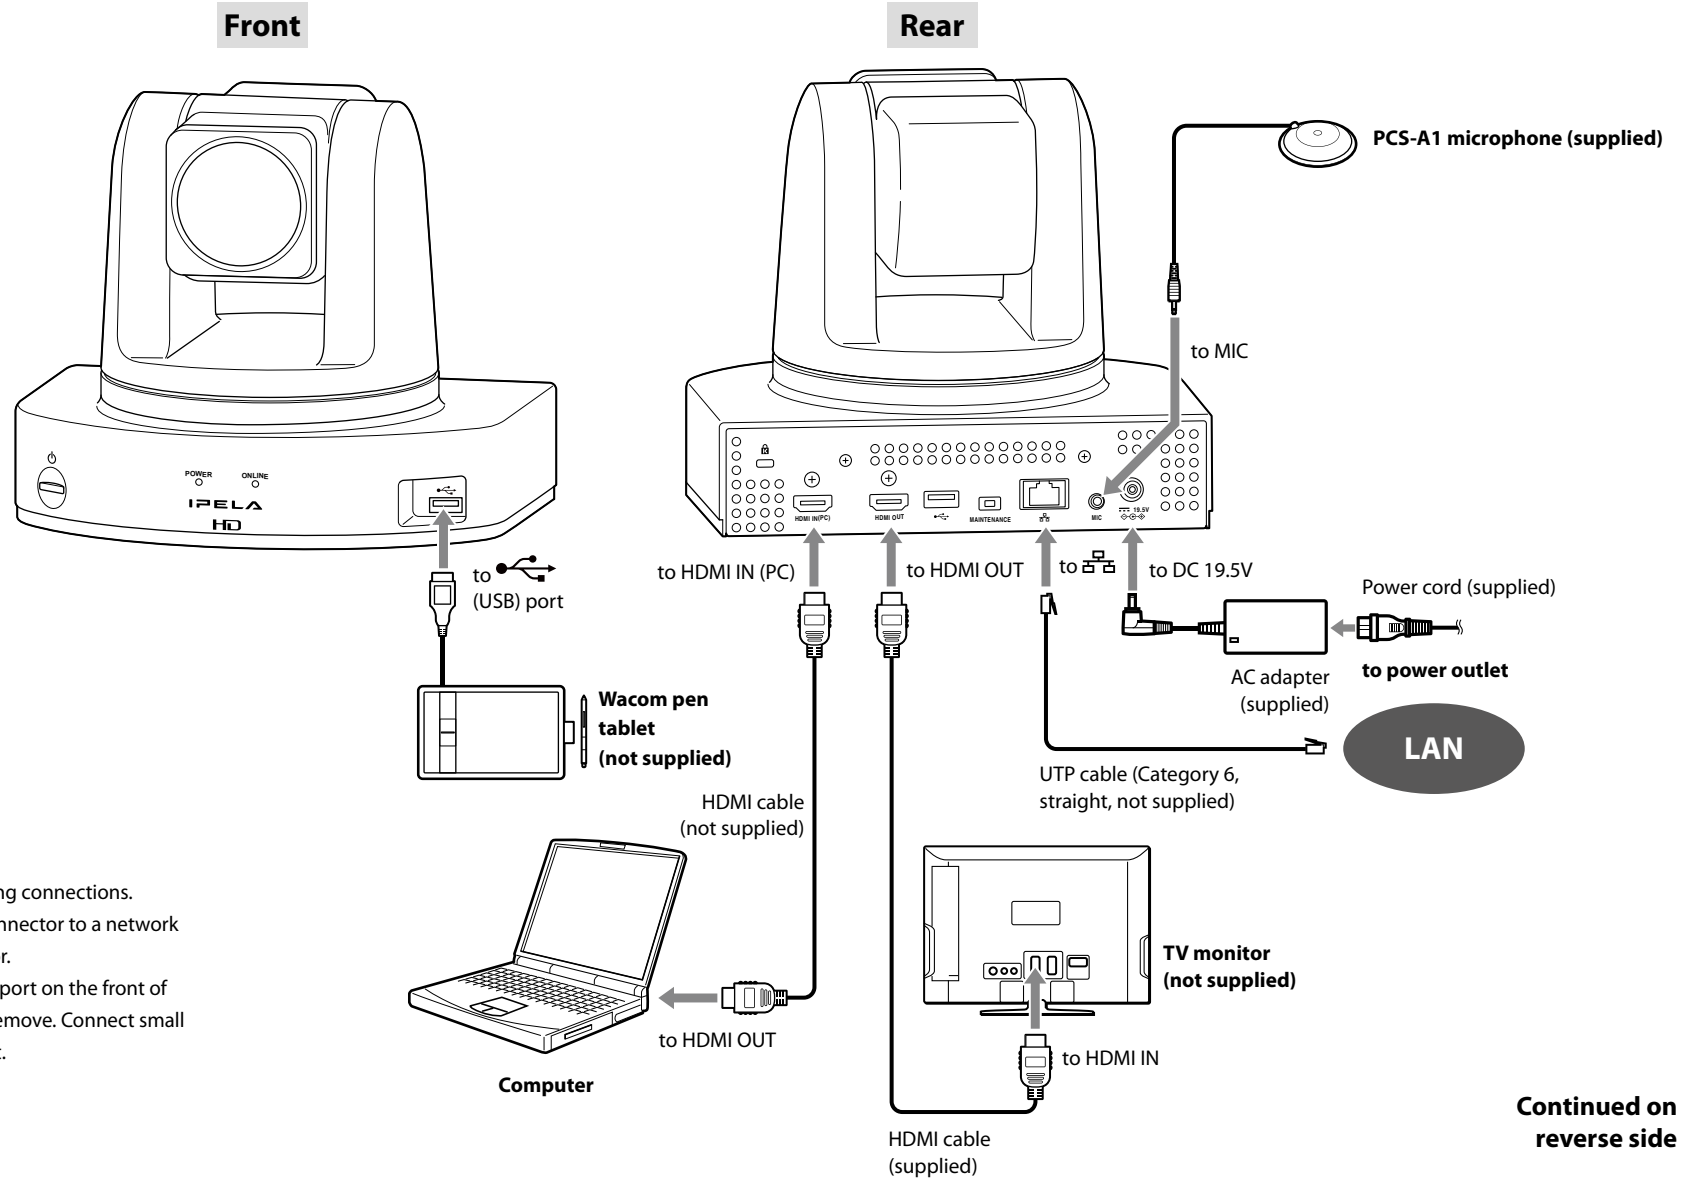

Note

We recommend using Sony HDMI cables.

Caution

- Be sure to turn off all equipment before making connections.
- For safety, do not connect the 1000BASE-T connector to a network that will apply excess voltage to the connector.
- Do not connect small USB devices to the USB port on the front of the unit, as they may become impossible to remove. Connect small devices to the USB port on the rear of the unit.

Changing the “Frequency” Setting with the Remote Commander

If the “Frequency” setting in the Video setup menu is configured incorrectly, pictures will not be displayed on the monitor. In such cases, use the ⏻ (power) switch on the unit and the buttons on the Remote Commander to configure the correct settings.

To change the “Frequency” setting

Wait at least 2 minutes after rebooting the unit, and then perform the following.

- 1 Press the ⏻ (power) switch on the unit.
- 2 Within five seconds after you pressed the ⏻ switch, press the buttons on the Remote Commander as follows, based on the desired “Frequency.”

Desired “Frequency”	On the Remote Commander, press:
60 Hz	VIDEO INPUT button (once) → Number button 1 (three times)
50 Hz	VIDEO INPUT button (once) → Number button 2 (three times)

The “Frequency” setting is changed, and the unit shuts down. Press the ⏻ (power) switch on the unit again to turn it on.